Installation

Sensor model	Procedure		
DMSG/CMSG/EMSG	1	2	3
	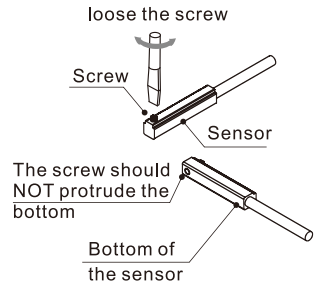	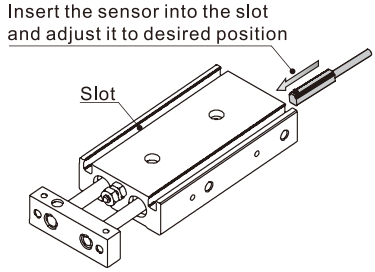	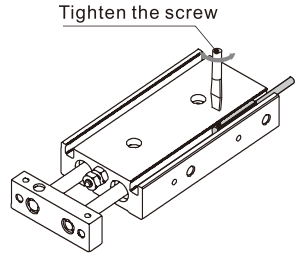
DMSE/CMSE	1	2	3
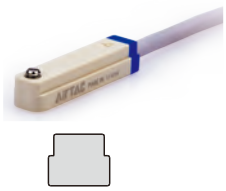	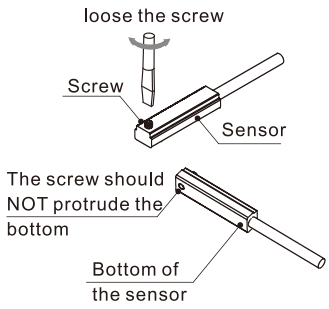	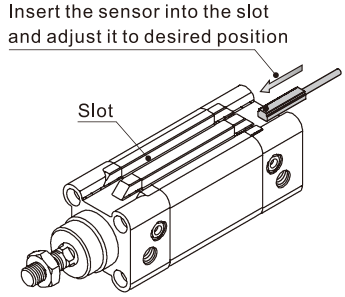	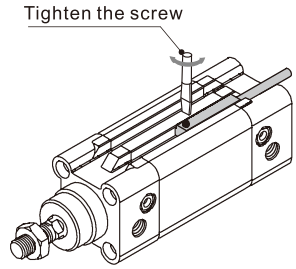
DMSH/CMSH/EMSH	1	2	3
	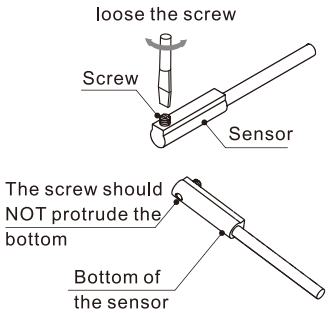	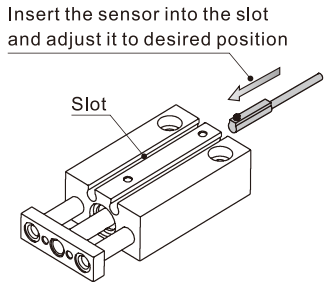	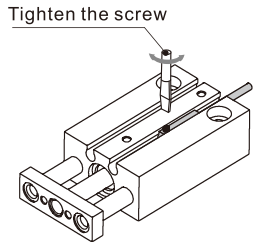
DMSJ/CMSJ	1	2	3
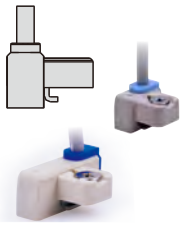	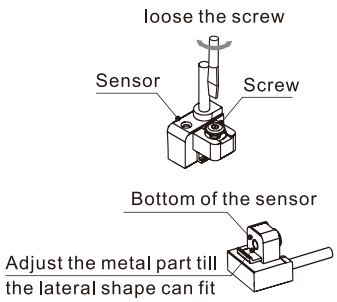	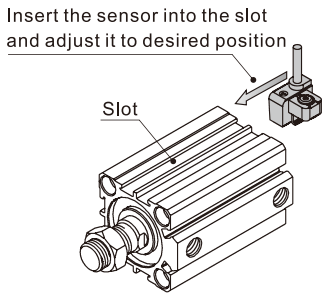	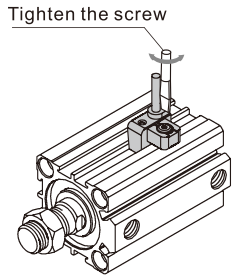

Sensor model	Procedure	
DMSG+(F-SC□SH) CMSG+(F-SC□SH)	1 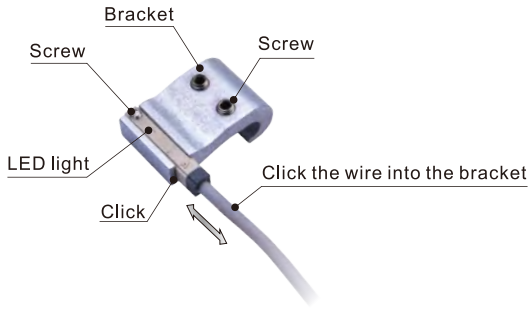	2 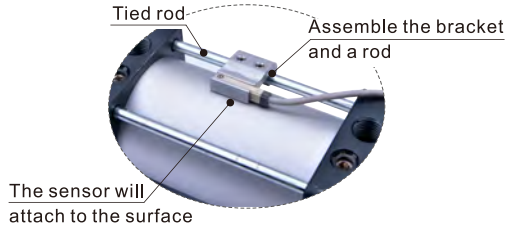
	3 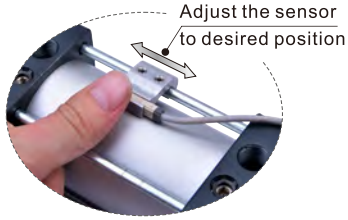	4 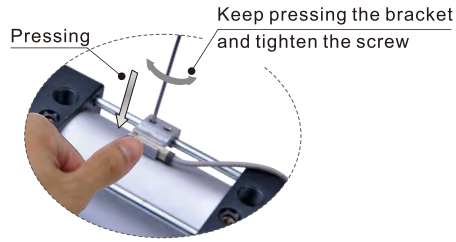
DMSG+(F-MQ□) CMSG+(F-MQ□)	1 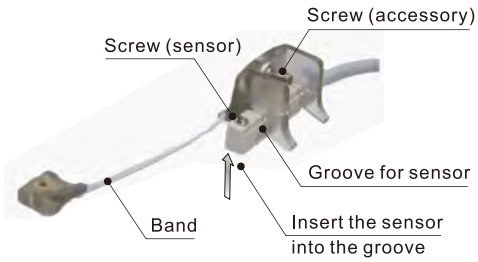	2 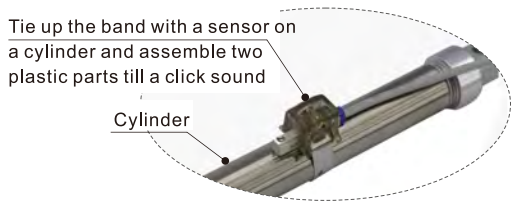
	3 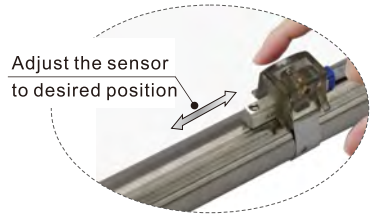	4 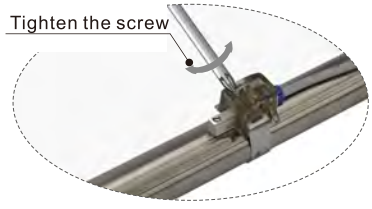

Sensor for " 米 " shape cylinder

SAI, SAU series will substitute for SI, SU series. And the corresponding sensors have some adjustments as the chart below.

Cylinder and accessory

New type(SAI)		Previous type(SI)		
Cylinder	Sensor	Cylinder	Sensor	
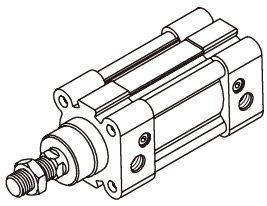	CMSE \ DMSE	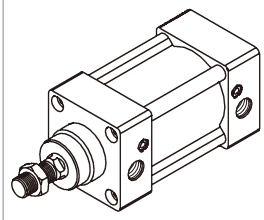	CS1B1 / DS1B1 CS1B2 / DS1B2 CS1B3 / DS1B3 CS1B4 / DS1B4 CS1B5 / DS1B5 CS1B6 / DS1B6 CS1B7 / DS1B7	CS1F/DS1F/CS1U/DS1U + F-SI32H/F-SI40H F-SI50H/F-SI63H F-SI80H/F-SI100H F-SI125H/F-SI160H F-SI200H

Installation

New type(SAI)	Previous type(SI)
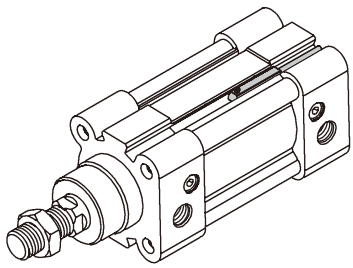	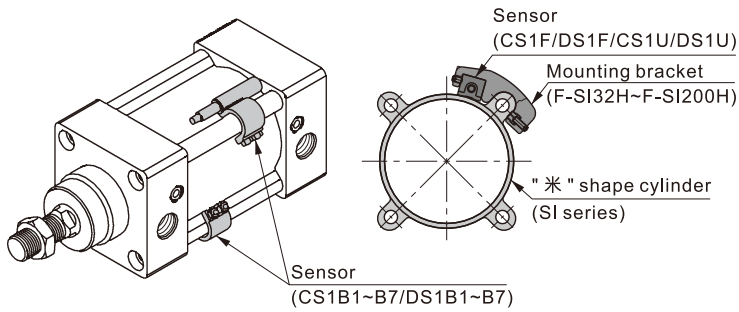

Cylinder and accessory

New type(SAU)		Previous type(SU)		
Cylinder	Sensor	Cylinder	Sensor	
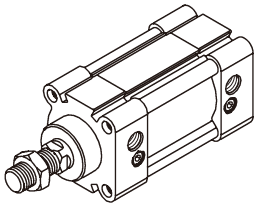	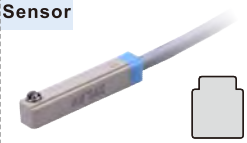 DMSG \ CMSG\ EMSG	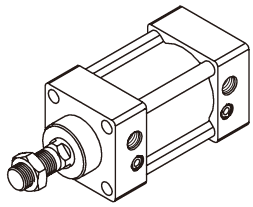	CS1B1 / DS1B1 CS1B2 / DS1B2 CS1B3 / DS1B3 CS1B4 / DS1B4	 CS1F/DS1F/CS1U/DS1U + F-SU32H/F-SU40H F-SU50H/F-SU63H F-SU80H/F-SU100H

Installation
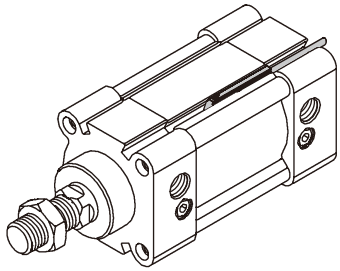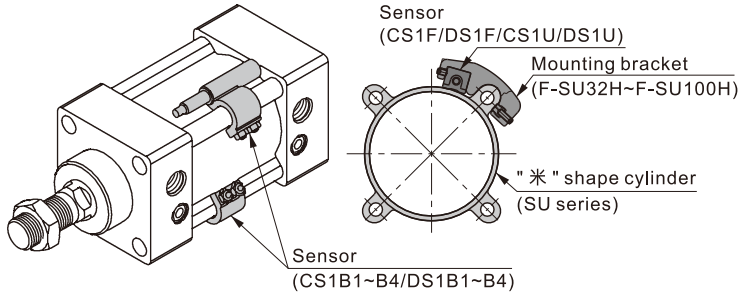
New type(SAU)	Previous type(SU)